



Cassarate

01

Ergoline

Smart Tan
Prestige 1100
Integral
TYPE 3



High pressure lamps on the face +
“UVB & beauty” spaghetti. Electronic
system that maintains UV output
without variations.

A mix of UV for tanning and vitamin D
and “beauty light” to stimulate collagen
production. Aroma, “Aqua fresh”,
“Climatronic”, guide voice and music.

Smart Tan Prestige 1100 sunbathing programme

If UV exposure (of any kind) is suspended for more than 3 weeks, the programme is restarted from the beginning

	5 min	First session with untanned skin	10 min	Second session with untanned skin	12-26 min	Subsequent sessions
Session	Exposure time	Joule amount (EER)	Pause between sessions	Annual dose contr. (NMSC)		
1st session on untanned skin	5 min	85,50 J/m ²	48 h	125,70 J/m ²		
2nd session on non-tanned skin	10 min	171,00 J/m ²	48 h	251,40 J/m ²		
Session No. 1	12 min	205,20 J/m ²	48 h	301,68 J/m ²		
Session No. 2	14 min	239,40 J/m ²	48 h	351,96 J/m ²		
Session No. 3	15 min	256,50 J/m ²	48 h	377,10 J/m ²		
Session No. 4	19 min	324,90 J/m ²	48 h	477,66 J/m ²		
Session No. 5	21 min	359,10 J/m ²	48 h	527,94 J/m ²		
Session No. 6	23 min	393,30 J/m ²	48 h	578,22 J/m ²		
From 7th session	26 min	444,60 J/m ²	48 h	653,64 J/m ²		



Cassarate

02

Ergoline

Smart Tan
Prestige 1600
Integral
TYPE 3

A mix of UV for tanning and vitamin D and “Beauty light” to stimulate collagen production. High-pressure lamps on the face + “Smart Tan” spaghetti + 4 “Beauty light” LED panels that remain lit even if the UV sector on the face is switched off. Possibility of storing your preferences for the following sessions. Aroma, “Aqua fresh”, “Climatronic”, guide voice and music.



Smart Tan Prestige 1600 sunbathing programme

If UV exposure (of any kind) is suspended for more than 3 weeks, the programme is restarted from the beginning

Session	Exposure time	Joule amount (EER)	Pause between sessions	Annual dose contr. (NMSC)
1st session on untanned skin	5 min	87,60 J/m ²	48 h	132,30 J/m ²
2nd session on non-tanned skin	10 min	175,20 J/m ²	48 h	264,60 J/m ²
Session No. 1	12 min	210,24 J/m ²	48 h	317,52 J/m ²
Session No. 2	13 min	227,76 J/m ²	48 h	343,98 J/m ²
Session No. 3	15 min	262,80 J/m ²	48 h	396,90 J/m ²
Session No. 4	18 min	315,36 J/m ²	48 h	476,28 J/m ²
Session No. 5	20 min	350,40 J/m ²	48 h	529,20 J/m ²
Session No. 6	22 min	385,44 J/m ²	48 h	582,12 J/m ²
From 7th session	25 min	438,00 J/m ²	48 h	661,50 J/m ²




Cassarate

03

Ergoline

Smart Tan
Prestige 1400
Integral
TYPE 3

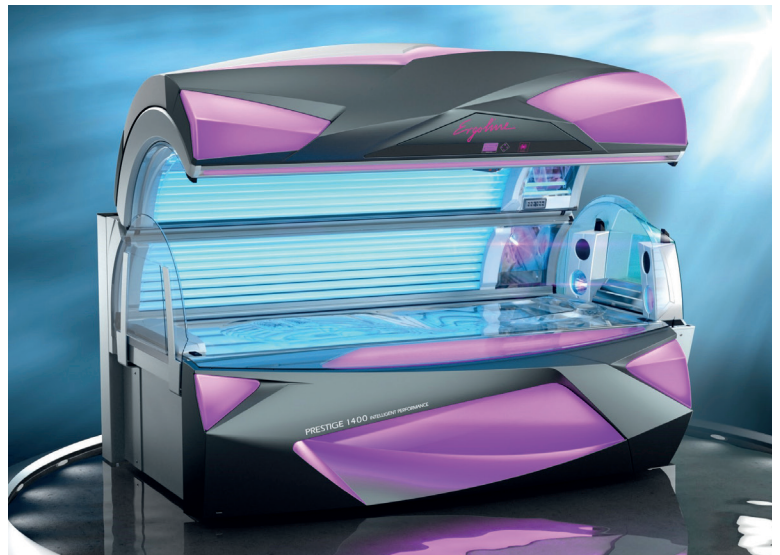

High-pressure lamps on the face + “UVB & beauty” spaghetti. Optimised tunnel for an even tan over the whole body. A mix of UV for tanning and vitamin D and “beauty light” to stimulate collagen production. Aroma, “Aqua fresh”, “Climatronic”, guide voice and music.

Smart Tan Prestige 1400 sunbathing programme

If UV exposure (of any kind) is suspended for more than 3 weeks, the programme is restarted from the beginning

	6 min	First session with untanned skin	10 min	Second session with untanned skin	13-27 min	Subsequent sessions
Session	Exposure time	Joule amount (EER)	Pause between sessions	Annual dose contr. (NMSC)		
1st session on untanned skin	6 min	99,7 J/m ²	48 h	153,4 J/m ²		
2nd session on non-tanned skin	10 min	166,2 J/m ²	48 h	255,6 J/m ²		
Session No. 1	13 min	216,1 J/m ²	48 h	332,3 J/m ²		
Session No. 2	14 min	232,7 J/m ²	48 h	357,8 J/m ²		
Session No. 3	16 min	265,9 J/m ²	48 h	409,0 J/m ²		
Session No. 4	19 min	315,8 J/m ²	48 h	485,6 J/m ²		
Session No. 5	21 min	349,0 J/m ²	48 h	536,8 J/m ²		
Session No. 6	24 min	398,9 J/m ²	48 h	613,4 J/m ²		
From 7th session	27 min	448,7 J/m ²	48 h	690,1 J/m ²		



Cassarate

04

Ergoline

Open Sun Pilot

Half-body exposure
TYPE 3

If you only want to tan your face,
back, décolleté and hands.
Guiding voice and music.



Open Sun Pilot sunbathing programme

If UV exposure (of any kind) is suspended for more than 3 weeks, the programme is restarted from the beginning

6 min	First session with untanned skin	14 min	Second session with untanned skin	20-33 min	Subsequent sessions
-------	--	--------	---	-----------	---------------------

Session	Exposure time	Joule amount (EER)	Pause between sessions	Annual dose contr. (NMSC)
1st session on untanned skin	6 min	100 J/m ²	48 h	162 J/m ²
2nd session on non-tanned skin	14 min	250 J/m ²	48 h	378 J/m ²
Session No. 1	20 min	360 J/m ²	48 h	540 J/m ²
Session No. 2	25 min	450 J/m ²	48 h	675 J/m ²
Session No. 3	30 min	540 J/m ²	48 h	810 J/m ²
From 4th session	33 min	600 J/m ²	48 h	891 J/m ²



Cassarate

05 anche



Ergoline

Smart Tan
Esprit
Integral
TYPE 3



Electronic system that maintains UV output without variations. A mix of UV, for tanning and vitamin D, and “Beauty light”, to stimulate collagen production. High-pressure lamps on the face. Aroma, “Aqua fresh”, “Climatronic”, guide voice and music.

Smart Tan Esprit sunbathing programme

If UV exposure (of any kind) is suspended for more than 3 weeks, the programme is restarted from the beginning

	6 min	First session with untanned skin	14 min	Second session with untanned skin	20-33 min	Subsequent sessions
Session	Exposure time	Joule amount (EER)	Pause between sessions	Annual dose contr. (NMSC)		
1st session on untanned skin	6 min	100 J/m ²	48 h	180 J/m ²		
2nd session on non-tanned skin	14 min	250 J/m ²	48 h	420 J/m ²		
Session No. 1	20 min	360 J/m ²	48 h	600 J/m ²		
Session No. 2	25 min	450 J/m ²	48 h	750 J/m ²		
Session No. 3	30 min	540 J/m ²	48 h	900 J/m ²		
From 4th session	33 min	600 J/m ²	48 h	990 J/m ²		



Cassarate

06



Smart Tan

Optima Tower

Integral Solar Shower
TYPE 3



A mix of UV for tanning and vitamin D and “Beauty light” to stimulate collagen production. 100 “Beauty boost” LEDs in the facial area.

And while you’re tanning, work out or relax with the “Vibra-nano” footbed. Aroma, “Aqua cool”, guide voice and music.

Smart Tan Optima Tower sunbathing programme

If UV exposure (of any kind) is suspended for more than 3 weeks, the programme is restarted from the beginning

6 min	First session with untanned skin	10-14 min	Second session with untanned skin	13-25 min	Subsequent sessions
-------	--	-----------	---	-----------	---------------------

Session	Exposure time	Joule amount (EER)	Pause between sessions	Annual dose contr. (NMSC)
1st session on untanned skin	5 min	100 J/m ²	48 h	99 J/m ²
2nd session on non-tanned skin	11 min	200 J/m ²	48 h	218 J/m ²
Session No. 1	13 min	235 J/m ²	48 h	258 J/m ²
Session No. 2	13 min	235 J/m ²	48 h	258 J/m ²
Session No. 3	16 min	290 J/m ²	48 h	317 J/m ²
Session No. 4	16 min	290 J/m ²	48 h	317 J/m ²
Session No. 5	19 min	350 J/m ²	48 h	377 J/m ²
Session No. 6	22 min	400 J/m ²	48 h	437 J/m ²
From 7th session	25 min	450 J/m ²	48 h	496 J/m ²



Cassarate

07

Ergoline

Smart Tan
Prestige 1100
Integral
TYPE 3



High pressure lamps on the face +
“UVB & beauty” spaghetti. Electronic
system that maintains UV output
without variations.

A mix of UV for tanning and vitamin D
and “beauty light” to stimulate collagen
production. Aroma, “Aqua fresh”,
“Climatronic”, guide voice and music.

Smart Tan Prestige 1100 sunbathing programme

If UV exposure (of any kind) is suspended for more than 3 weeks, the programme is restarted from the beginning

5 min	First session with untanned skin	10 min	Second session with untanned skin	12-26 min	Subsequent sessions
-------	--	--------	---	-----------	---------------------

Session	Exposure time	Joule amount (EER)	Pause between sessions	Annual dose contr. (NMSC)
1st session on untanned skin	5 min	85,50 J/m ²	48 h	125,70 J/m ²
2nd session on non-tanned skin	10 min	171,00 J/m ²	48 h	251,40 J/m ²
Session No. 1	12 min	205,20 J/m ²	48 h	301,68 J/m ²
Session No. 2	14 min	239,40 J/m ²	48 h	351,96 J/m ²
Session No. 3	15 min	256,50 J/m ²	48 h	377,10 J/m ²
Session No. 4	19 min	324,90 J/m ²	48 h	477,66 J/m ²
Session No. 5	21 min	359,10 J/m ²	48 h	527,94 J/m ²
Session No. 6	23 min	393,30 J/m ²	48 h	578,22 J/m ²
From 7th session	26 min	444,60 J/m ²	48 h	653,64 J/m ²